
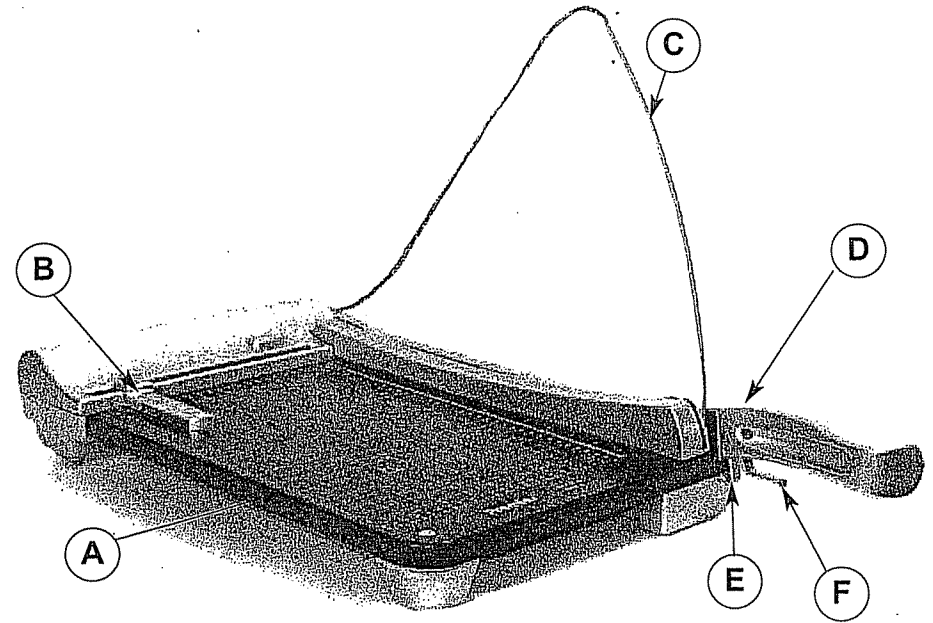




# Premier<sup>®</sup>

## AC150 15" Stackcut Trimmer with Auto-Clamp

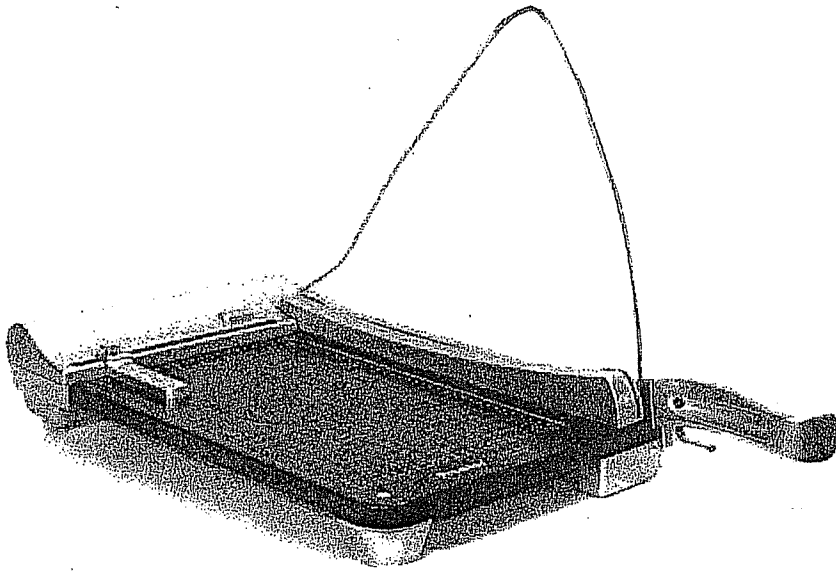

### Key Components

- A - Trimmer Body
- B - Paper Stop
- C - Blade Guard
- D - Blade Arm
- E - Blade Latch
- F - Blade Release
- G - Cutting Light Switch
- H - Carrying Handle

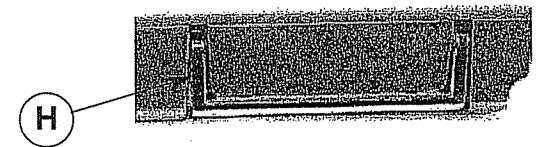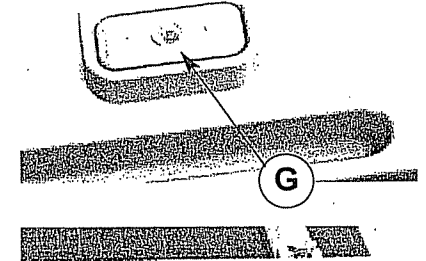


### Key Features and Benefits

- Patented automatic blade latch locks with every cutting motion
- The auto-clamp also functions as a finger guard safety feature.
- Precise lighted cutting edge assists accurate cutting
- Permanent grid and dual rulers for proper paper alignment. The angular grid makes tough angle cuts simple.
- Durable, adjustable paper stop maintains proper position of paper during clamping
- Convenient carrying handle makes moving your trimmer a snap
- Cuts up to 40 sheets of 20# bond paper at a time.
- Non-skid feet

2 AAA Bateriaes  
Included


### Assembly Instructions

Insert batteries into the bottom of the trimmer as shown.

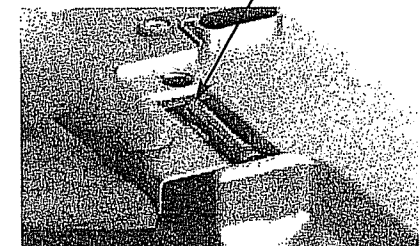


## Assembly Instructions (continued)

Insert the blade guard into the slot on the top of the paper clamp and snap into place. Once in place, the blade guard cannot be removed.

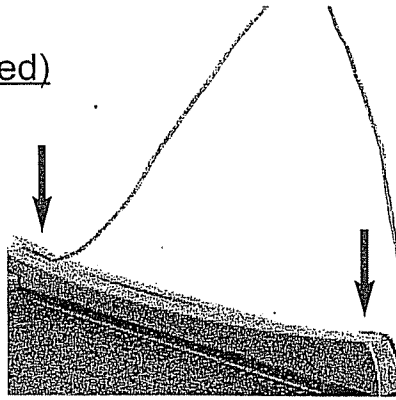


## Operating Instructions


- 1 Place the trimmer on a flat, stable surface. Turn on the light by pressing the cutting light switch near the paper stop channel, if desired.

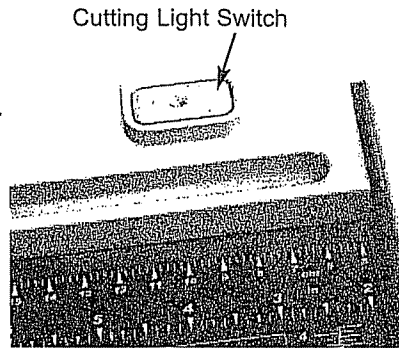

- 2 Loosen the paper stop knob and slide the paper stop in the channel to the desired position using the rulers as a guide. Retighten.

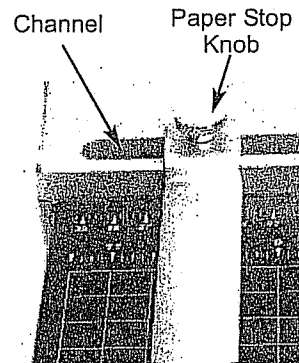


- 3 Release the blade latch by compressing the blade release, which is located on the hand grip. Lift the blade arm up into cutting position and slide the paper beneath the clamp. Align the left edge of the paper with the paper stop.

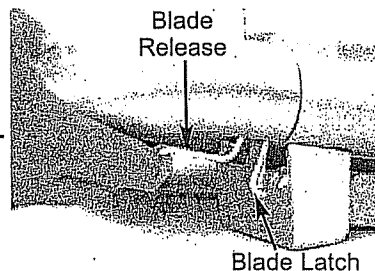


## Operating Instructions (continued)

- 4 Holding the paper in place with your left hand, use your right hand to press down firmly on the blade arm. The auto-clamp will automatically engage. The lighted cutting edge will show you the approximate location of your cut.

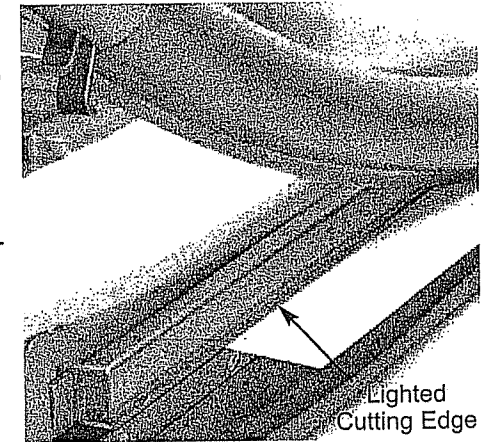

- 5 Release the blade latch and raise the blade arm into its upper-most position to disengage the auto-clamp. Remove the paper.

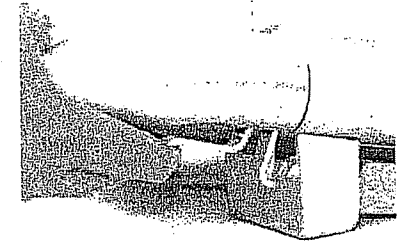

**CAUTION:**  
Blades are very sharp! Keep hands and fingers away from the cutting edge at all times. Keep out of the reach of children.

## Customer Service

Telephone: (260) 563-0641  
Fax: (260) 563-4575  
Email: info@martinyale.com  
Internet: www.martinyale.com  
Address: Martin Yale Industries, Inc.  
251 Wedcor Avenue  
Wabash, IN 46992

Visit [www.martinyale.com](http://www.martinyale.com) for information on office products, including folding machines, punches, and catalog racks.