


# BACKGAUGE TROUBLESHOOTING-NO DISPLAY

For More Info

Click Here --->

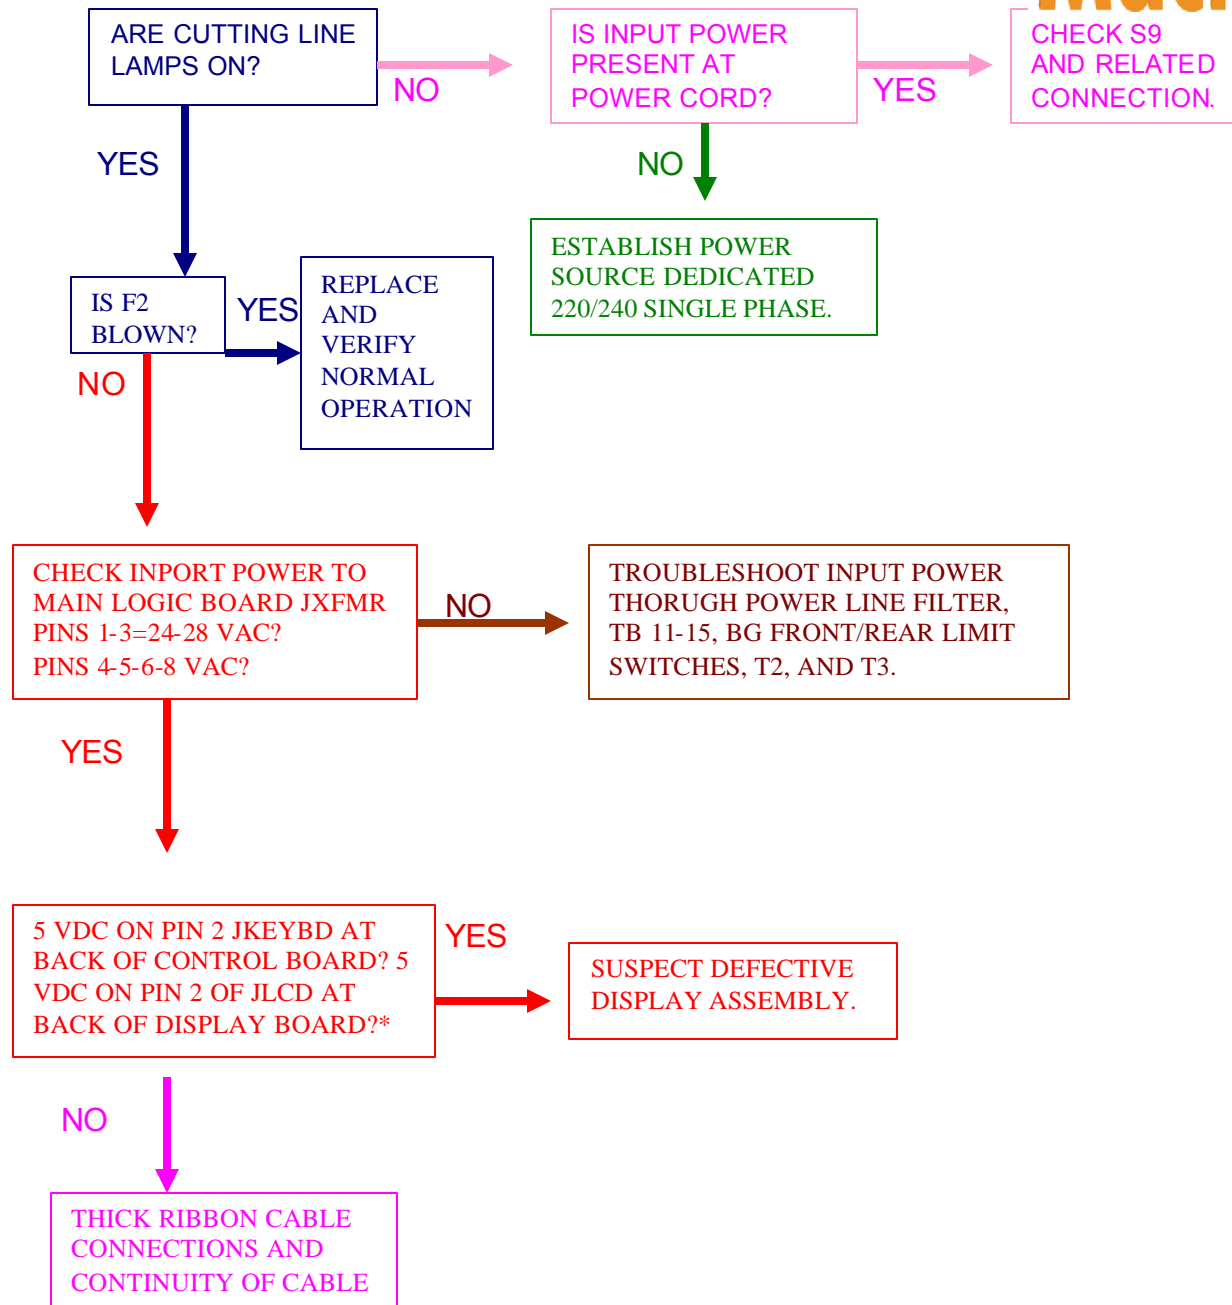

**NOTE:** If display is erratic or a blocked line, suspect a loose connection, defective main logic board, or display assembly.

**\*Must disconnect JLCD at back of display. Insert conductor (pin 1 ground, pin 2 5VDC) for test connector.**